



## Installation, Operation & Maintenance Instructions for the PRIER P-164/264 Diamond Series Quarter Turn Wall Hydrant

**\*Please leave this sheet for the property homeowner\***

Thank you for purchasing the PRIER P-164/264 Diamond Series Quarter Turn Wall Hydrant, the finest quality quarter turn wall hydrant available. Your P-164/264 will provide you years of dependable service with little or no maintenance.

### **Installation:**

Installation procedures may vary slightly depending on the seat option purchased and the installation inlet options. PRIER freezeless wall hydrants are available with the following inlet options:

<b>D</b>	1/2" MIP x 1/2" SWT	<b>Bore 1" Hole</b>
<b>S</b>	1/2" SWT x 3/4" Push-On	<b>Bore 1" Hole</b>
<b>X</b>	1/2" Crimp PEX	<b>Bore 1" Hole</b>
<b>W</b>	1/2" Wirsbo® PEX	<b>Bore 1" Hole</b>
<b>C</b>	<b>1/2" CPVC</b>	<b>Bore 1" Hole</b>
<b>T</b>	3/4" MIP x 1/2" FIP	<b>Bore 1 1/8" Hole</b>
<b>F</b>	3/4" MIP x 3/4" SWT	<b>Bore 1 1/8" Hole</b>
<b>FX</b>	3/4" Crimp PEX	<b>Bore 1 1/8" Hole</b>
<b>FW</b>	3/4" Wirsbo® PEX	<b>Bore 1 1/8" Hole</b>

1. Determine the location for the installation of the hydrant. The valve must be installed into a heated area of the structure that will not drop below freezing. Ensure there is adequate work room in the interior of the structure for securing the hydrant to the plumbing piping. Bore the whole size listed above through the wall in the desired position for the installation.
2. All freezeless wall hydrants require a slight downward pitch to aid the draining process of the hydrant once the product is turned to the "off" position. PRIER has machined an appropriate pitch into the casted backflange to assist and ensure that a proper drainage pitch results after installation.
3. Position the spout of the hydrant in the downward position. From the interior of the structure, utilize the spout aligning mark on the seat. When the mark is pointed down, the spout is oriented in the proper position on the outside of the structure.
4. If you are planning to solder the connection (D, S or F style seats), be certain the hydrant is in the fully open position to prevent seat damage from the heat. If you are installing using a threaded adapter, hand tighten until valve is snug, then orient spout in the proper direction. Use a strap wrench if necessary. **DO NOT OVERTIGHTEN.**
5. Connect the water supply piping to the freezeless wall hydrant as desired. With a closed-end hose on the valve creating back pressure, test the installation for leakage.
6. After the water supply connection is made, secure the hydrant to the structure using appropriate screws through the two mounting holes on the casted back flange.

### **Operation:**

Operation of the P-164/264 Diamond Series Quarter Turn Wall Hydrant is a simple process. Water flows through the hydrant after turning the handle (or operating key for the P-264 style) counter-clockwise to the "on" position. Turn off the hydrant by turning the handle clockwise to the "off" position.

The hydrant will drain for a few moments. If the dripping persists after a few moments, tighten the handle slightly until the dripping stops. Be careful not to overtighten the hydrant.

The P-164/264 incorporates an integral atmospheric anti-siphon vacuum breaker that, in the rare occurrence of a back siphonage, opens to the atmosphere preventing contamination of the water supply.

As well as an atmospheric vacuum breaker, the P-164/264 incorporates a backflow preventer that operates as a check valve in the rare case that water is forced backwards into the valve. The backflow preventer has been tested to 125 PSI pressure.

**\*ALWAYS REMOVE HOSE DURING FREEZING TEMPERATURES\***  
**\*INTENDED FOR IRRIGATION USE AND OUTDOOR WATERING\***


### **Maintenance:**

The PRIER P-164/264 Diamond Series Quarter Turn Wall Hydrant leaves the factory fully air tested and operational. It is treated with an FDA approved lubrication. The hydrant requires no scheduled maintenance to provide long life.



4515 East 139th Street  
 Grandview, MO 64030  
 (800) 362-9055  
 Fax (800) 362-1463  
 www.PRIER.com

Replacement Parts

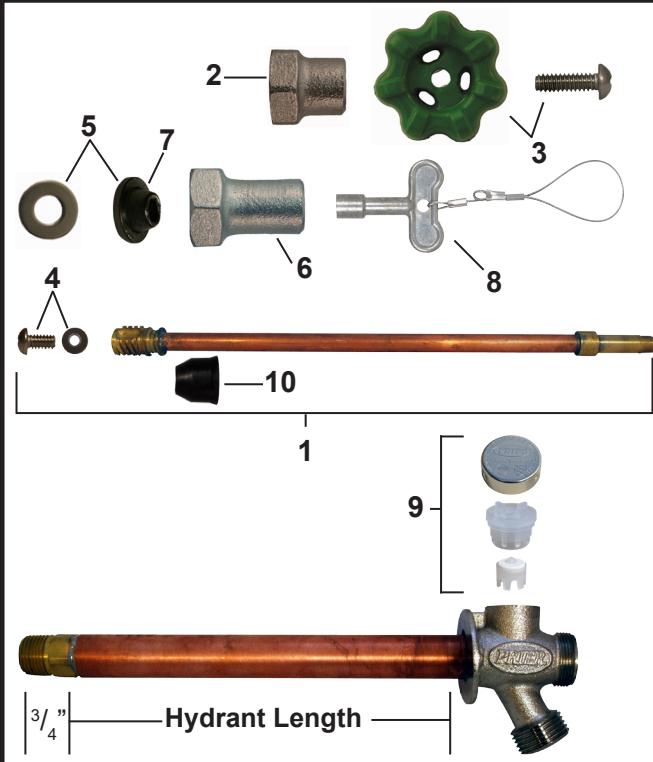

ID	Part No.	Description
1	See Below	Stem Assembly, Contains: 1, 4, 10
2	300-1008	Valve Stem Cap
3	P-164KT-805	Oval Handle and Screw Kit
4	C-134KT-802	Seat Washer Replacement Kit (00 Beveled)
5	C-134KT-803	Stem Packing Replacement Kit
6	310-1015	Valve Stem Cap for Loose Key
7	390-1001	Stem Packing Only
8	C-108KT-808	Oval Style Key on Lanyard
9	C-144KT-806	Universal Vacuum Breaker Replacement Kit
10	336-0002	Backflow Check Valve for P-164
	C-134KT-804	Handle to Loose Key Conversion Kit Contains: 5,6,8
	C-234KT-804	Loose Key to Handle Conversion Kit Contains: 2, 3, 5
	P-164KT-807	P-164 Overhaul Kit Contains: 3, 4, 5, 9, 10

\*The C-144KT-806 Universal Vacuum Breaker Kit fits all current and past PRIER and Mansfield style residential hydrants.

Replacement Stems



H Style Manufactured April 2013 - Present

Part No.	Style	Description	Stem Length
P-231-15CC	H	Close Coupled Stem for P-164 Hydrant	4 1/2" OAL
P-231-1504	H	Stem for 4" P-164 Hydrant	7" OAL
P-231-1506	H	Stem for 6" P-164 Hydrant	9" OAL
P-231-1508	H	Stem for 8" P-164 Hydrant	11" OAL
P-231-1510	H	Stem for 10" P-164 Hydrant	13" OAL
P-231-1512	H	Stem for 12" P-164 Hydrant	15" OAL
P-231-1514	H	Stem for 14" P-164 Hydrant	17" OAL
P-231-1516	H	Stem for 16" P-164 Hydrant	19" OAL
P-231-1518	H	Stem for 18" P-164 Hydrant	21" OAL
P-231-1520	H	Stem for 20" P-164 Hydrant	23" OAL
P-231-1522	H	Stem for 22" P-164 Hydrant	25" OAL
P-231-1524	H	Stem for 24" P-164 Hydrant	27" OAL
P-231-15US	H	*Universal Replacement Stem for P-164 Hydrant	Up to 17" OAL

\*\*For the **old style P-164 Series** wall hydrant stems, see P-164 Series retired style spec sheet at [www.PRIER.com](http://www.PRIER.com). PRIER universal stems are replacement stems for any size from close coupled to 14." They require cutting the rod to proper length and soldering the brass stem end to the rod as directed in instructions.